


6P Mini SPEC Pak® Crimp Instructions #8 AWG [10mm²] 1309G13

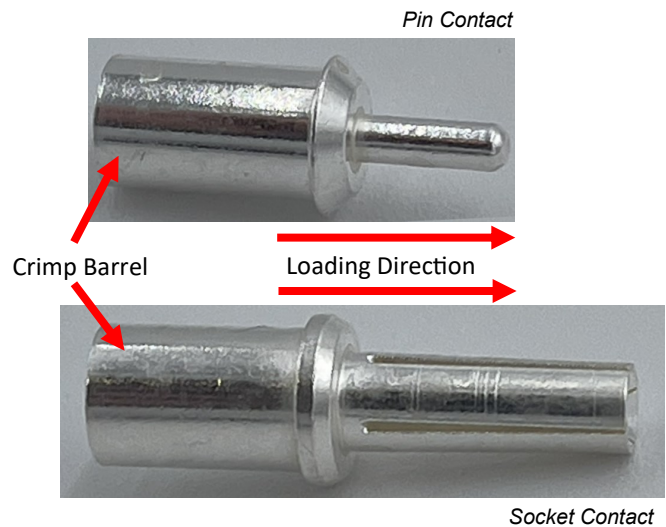


For Crimping 116132P1 & 116133P1 Contacts

- 1) Install contact into locator with barrel side point up



- 2) Insert stripped back wire fully into contact barrel and squeeze until tool releases.

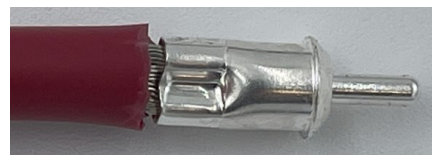

Crimped Pin Contact



Crimped Socket Contact